

Photo BALLOONS

No pressing required. Print directly on balloons with your inkjet printer!

2. Choose a photo

Click the "2.Photo" button. You should now be able to navigate throughout your computer's file system from within the upper left corner of the screen. The folder's contents will show thumbnail views of your pictures. Select the desired picture by double-clicking on the thumbnail. You can move the picture around with your mouse pointer.

You can also adjust your photo's colors from the pallet in the bottom right corner of the screen.

Show and Hide Layers

Your template is divided up and shown in layers. You can see each layer over in the right side of the screen. To show and hide layers, click on the eye icon on each layer. When the eye icon is greyed out whatever is on that layer of the template will not show or print. Click again to show and print.

3. Add/Edit Text

Click the "3.Text" button to add text to your balloon. Text editing such as color, shape, and size can be controlled over in the left side of the screen.

4. Print

Now you are ready to print your balloon! Click the "4.Print" button and then click the print button located to the left. You will then get your printer's property box to appear. You can adjust your photo mode and size within this box. The size of these balloon backboards are not common size papers, so you will need to change the paper size to "User Defined." Here are the recommending sizes.
18cm - 8.35" x 11.75"
28cm - 13" x 15.75"

Top-loading printers only.
Printers that make the U-Turn will not work.

*If your printer requires you to put a one-sided glossy piece of paper face down in it's tray in order to print on the glossy side, this is a U-Turn making printer and will not work. Most All-in-One printers will not work.

